



BABY FURNITURE

Mobile Closet Stand Assembly Instructions

Model No:

MCLEW1001

MCLCH1002

MCLNM1003


MCLWT1004

MCLBL1005

For ages 1 and up.
Adult assembly required.

WARNING

Small parts and sharp points may be present prior to assembly.

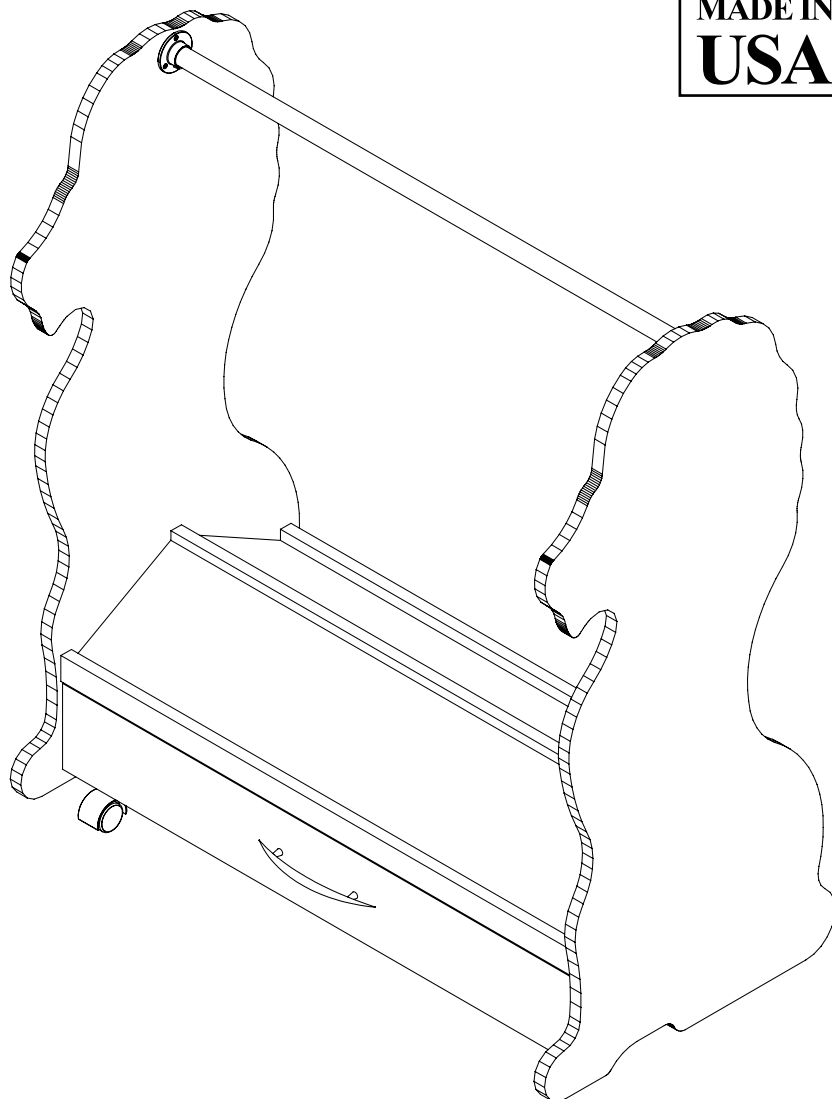

**MADE IN
USA**

One Year Limited Warranty

We will replace any missing parts at the time of purchase or any defective item within a one year period from the date of original purchase. Please keep your receipt so that we may process your warranty request. This warranty only covers new units with original packaging and ownership, and is not transferable. It does not cover any used, secondhand or demo models.

This warranty does not cover any damaged or defective parts that result from installation and assembly, normal wear and tear, abuse, negligence, improper use or alteration to the finish, design, and hardware. The specific legal rights of this warranty may vary from state to state. Some states do not allow any exclusion or limitation of incidental damages. Some states do not allow limitation on how long an implied warranty lasts.

Composition and Materials

Panolam panels consist of a melamine resin impregnated decorative paper, thermally fused to an industrial grade of particleboard. Thermal fusion takes place under heat and pressure and permanently bonds the resin impregnated paper to the substrate. The process of thermal fusion produces a permanent bond between the melamine surface and the substrate. Panels are supplied with decorative faces on both sides.

Maintenance

Panels can be easily cleaned with warm water and mild soaps. Do not use cleansers which contain abrasives, acids or alkalis.

Safety

Never allow children to climb or hang on the rod, drawers, doors, or shelves.

Formaldehyde Emission Test Data

Panolam panels are produced with particleboard conforming to the formaldehyde emission requirements for particleboard of the U.S. Department of Housing and Urban Development (HUD) and the CPA Voluntary Formaldehyde Emission Monitoring Program. Under 24 CFR 3280 Manufactured Home Construction and Safety Standards, formaldehyde emission must be less than 0.3 ppm for particleboard tested in accordance with FTM-2, the NPA/HPMA Large Scale Chamber Test. Panolam decorative panels, tested in-house in accordance with FTM-2, show formaldehyde emission less than 0.3 ppm.

Thank you for supporting U.S.A. - made products.

Please share your comments on our website!

Like Us on Facebook!

facebook.com/AceBabyFurniture

Instruction Manual is available on www.acebabyfurniture.com

Ace Baby Furniture

U.S. Mail: 11011 Glenoaks Blvd.
Pacoima, CA 91331 U.S.A.

Toll Free: (888) 518-7111

Fax: (818) 899-2097

Website: www.acebabyfurniture.com

Email: info@acebabyfurniture.com

Customer Support:

Toll Free (888) 518-7111

Parts

- (A) Right Panel
- (B) Left Panel
- (C) Center Panel
- (D) Slant Panel
- (E) Back Panel
- (F) Shoe Rack
- (G) Bottom Panel
- (H) Front Panel (Drawer)
- (I) Back Panel (Drawer)
- (J) Right Side (Drawer)
- (K) Left Side (Drawer)
- (L) Bottom (Drawer)

Missing Hardware? Call (888) 518-7111

No Additional Tools Are Required for Assembly!



We include a Phillips Screwdriver for your convenience!

Hardware

- 1 Connector Bolt 5mm (x14)

- 2 Dowel Ø8mm (x24)

- 3 Dowel Ø5mm (x8)

- 4 Handle Bolts 24mm (x2)

- 5 Screws 20mm (x6)

- 6 Screws 18mm (x6)

- 7 Screws 16mm (x16)

- 8 Screws 14mm (x4)

- 9 Connector Locks Ø15mm (x10)

- 10 Connector Locks Ø12mm (x4)

- 11 Clothes Rod (x1)

- 12 Clothes Rod Hardware (x2)

- 13 Drawer Rails (x2)

- 14 Casters (x4)


- 15 Handle (x1)


- 16 Small Hex (x1)

- 17 Phillips Hex (x1)


Note: Extra hardware may be included for your convenience.

1 Assemble Side Panels

1  Connector Bolt 5mm (x10)


2  Dowel Ø8mm (x24)

Note: Repeat the same step on part **(B)**

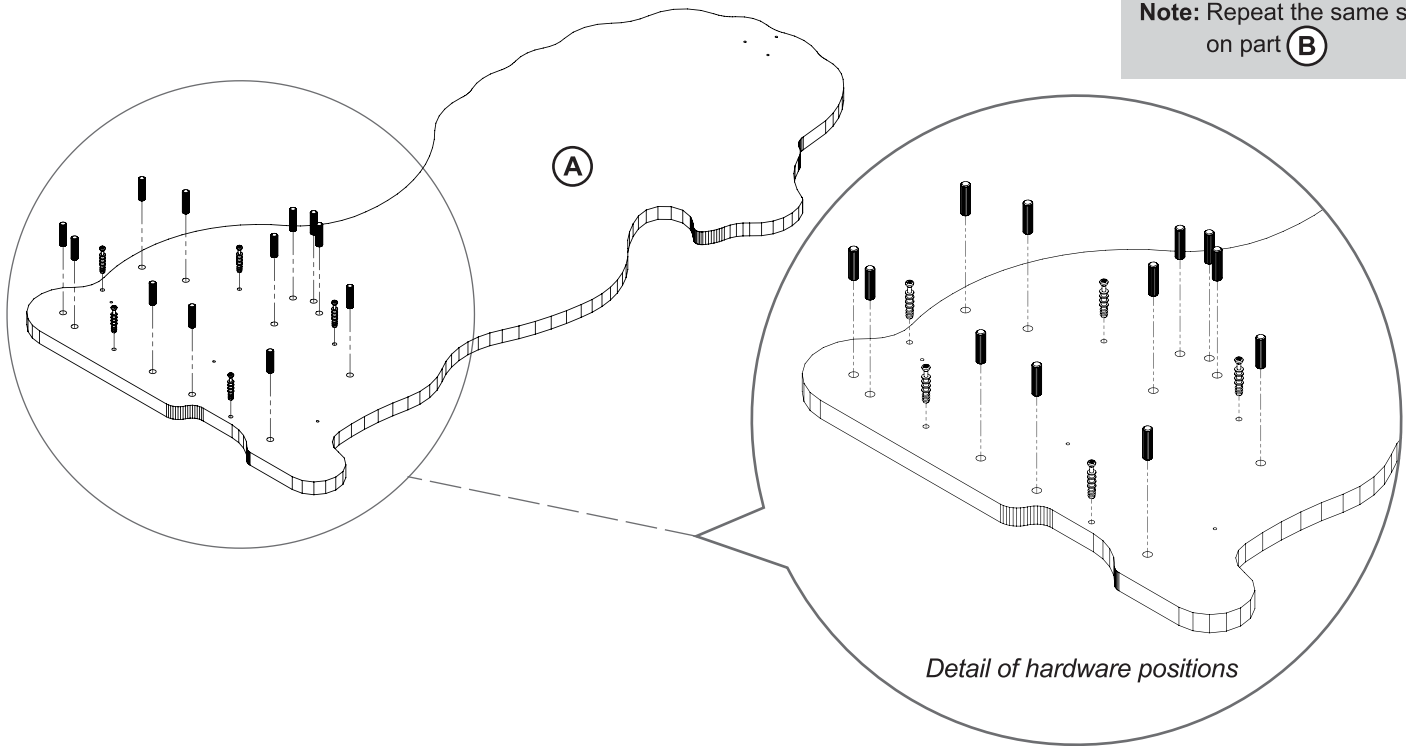

2 Attach Drawer Rail and Closet Hardware


5  Screws 20mm (x6)

6  Screws 18mm (x6)


12  Clothes Rod Hardware (x2)

13  Drawer Rails (x2)


Note: Repeat the same step on part **(B)**

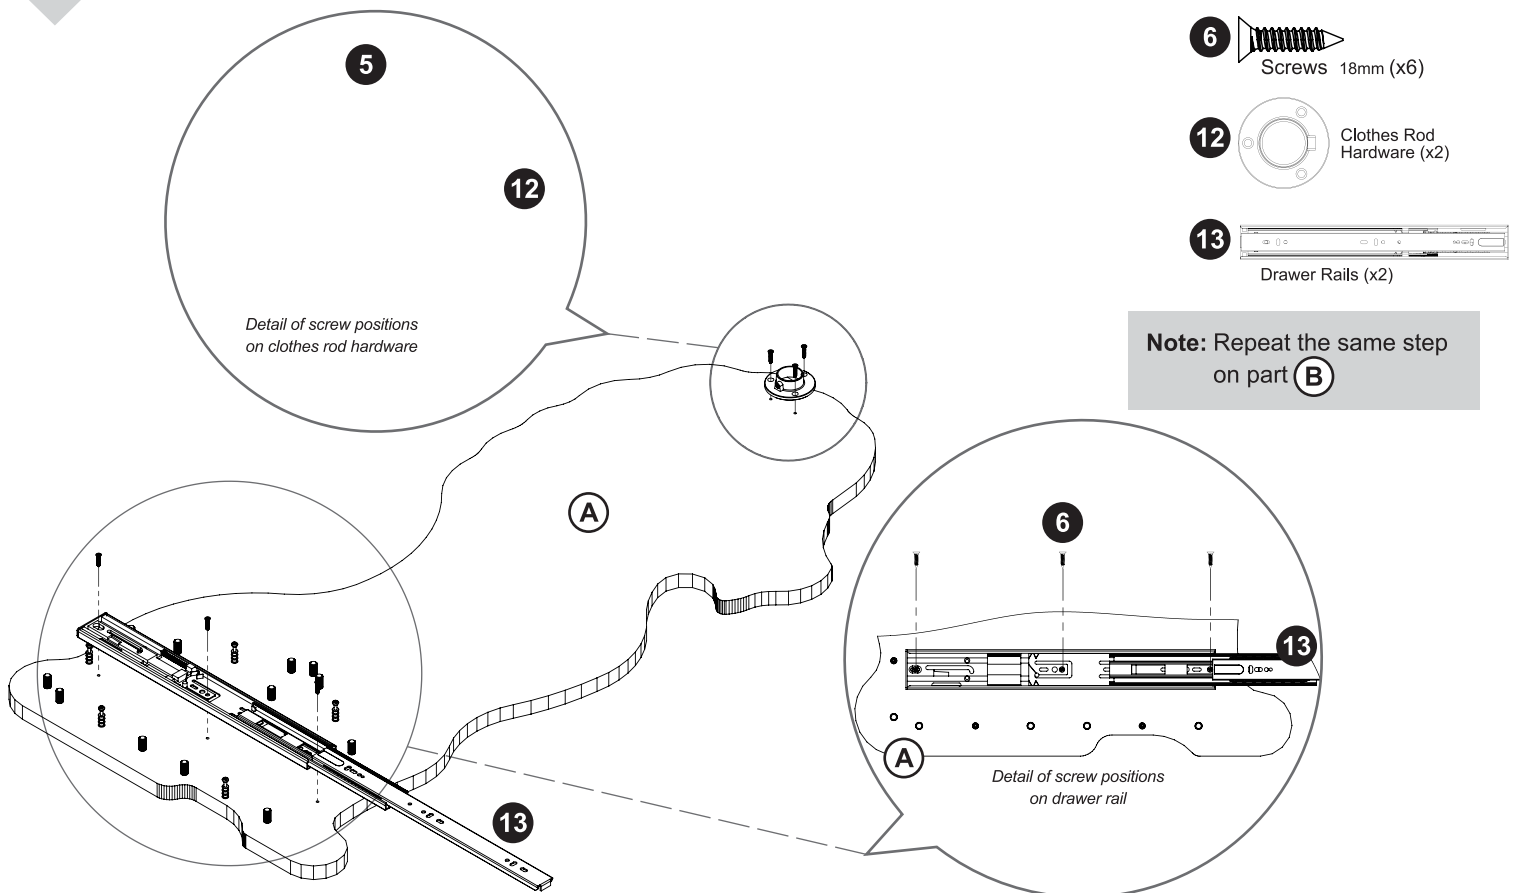


3 Place Cam Locks and Attach Casters

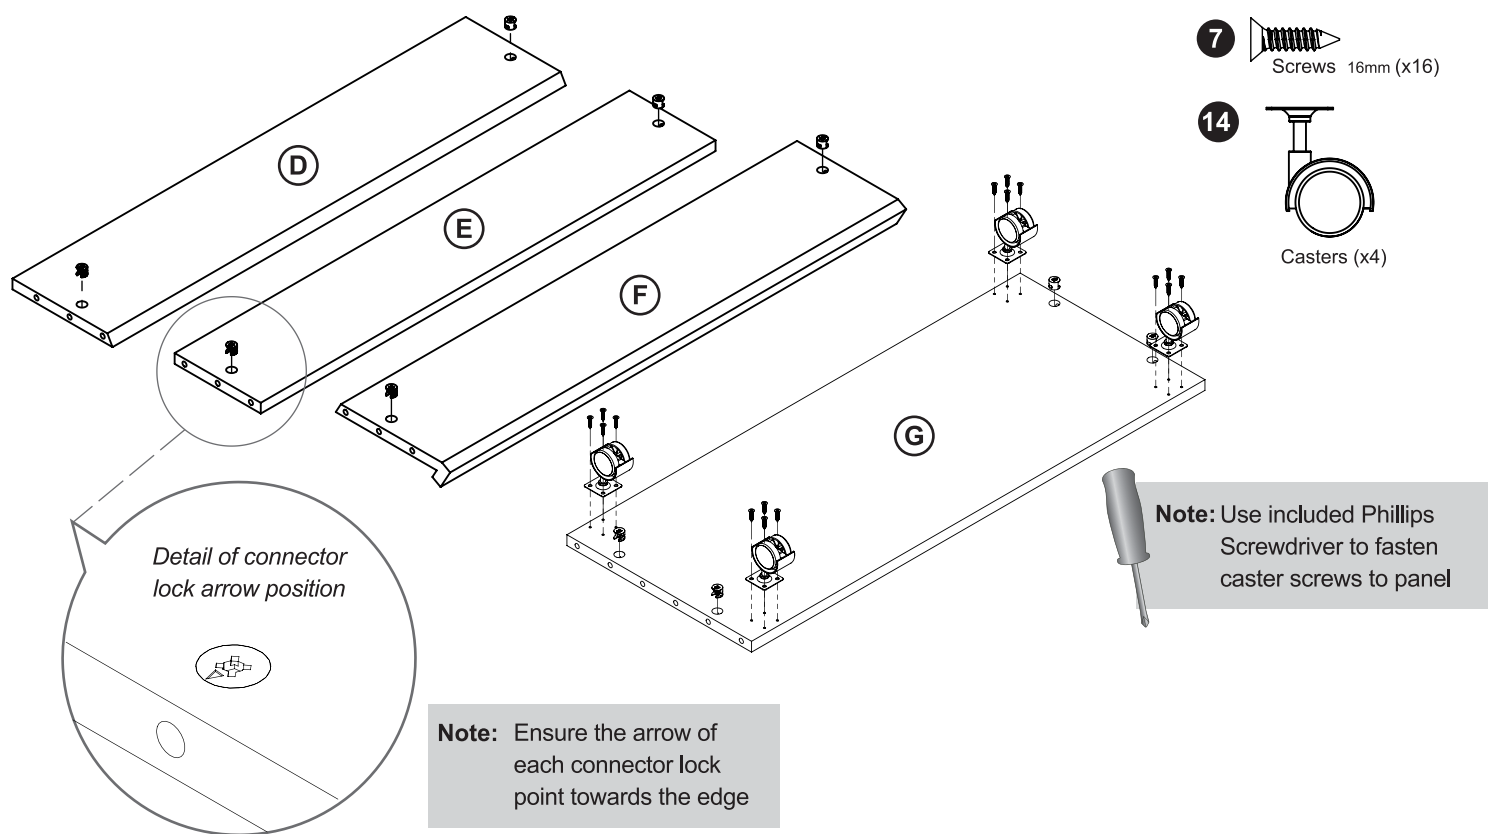

4 Assemble Center Panel

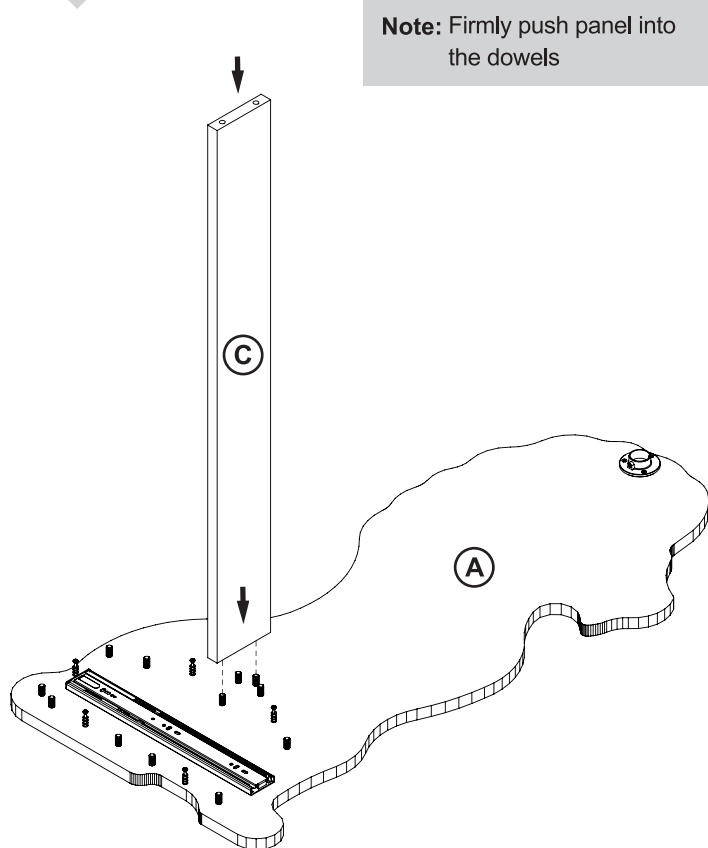


5 Assemble Slant Panel

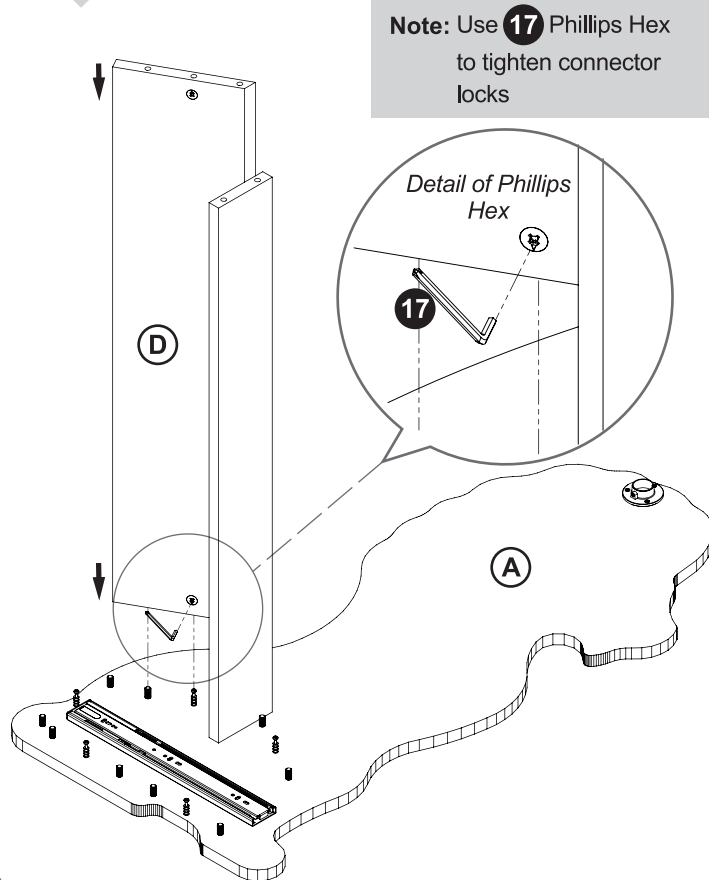


6 Assemble Back Panel

Note: Use 17 Phillips Hex to tighten connector locks

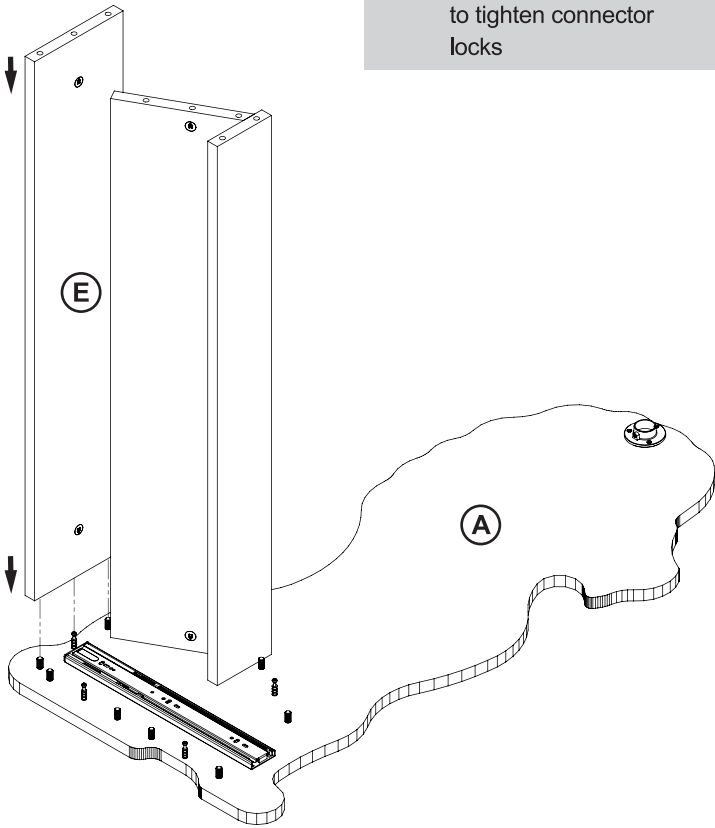


7 Assemble Shoe Rack

Note: Use 17 Phillips Hex to tighten connector locks

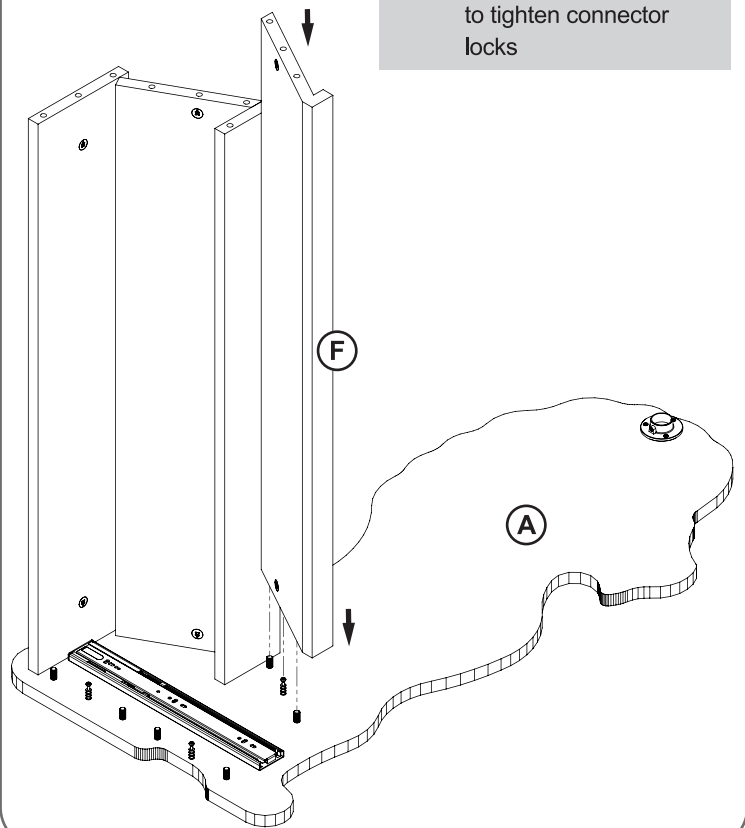


8 Assemble Bottom Panel

Note: Use 17 Phillips Hex to tighten connector locks

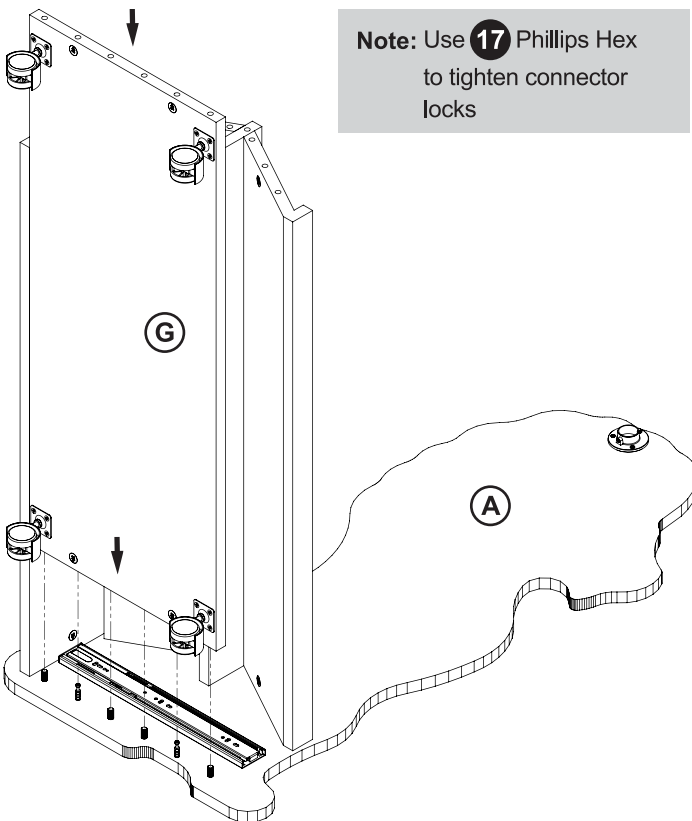


9 Assemble Side Panel to Cabinet

Note: Tighten 2 connector locks outside and 3 inside

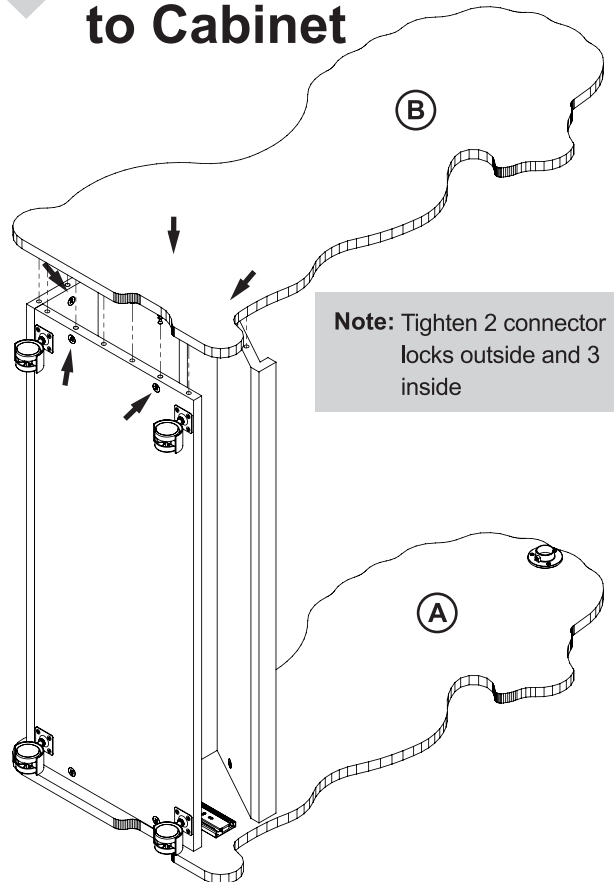

10 Fasten Clothes Rod


11 Clothes Rod (x1)

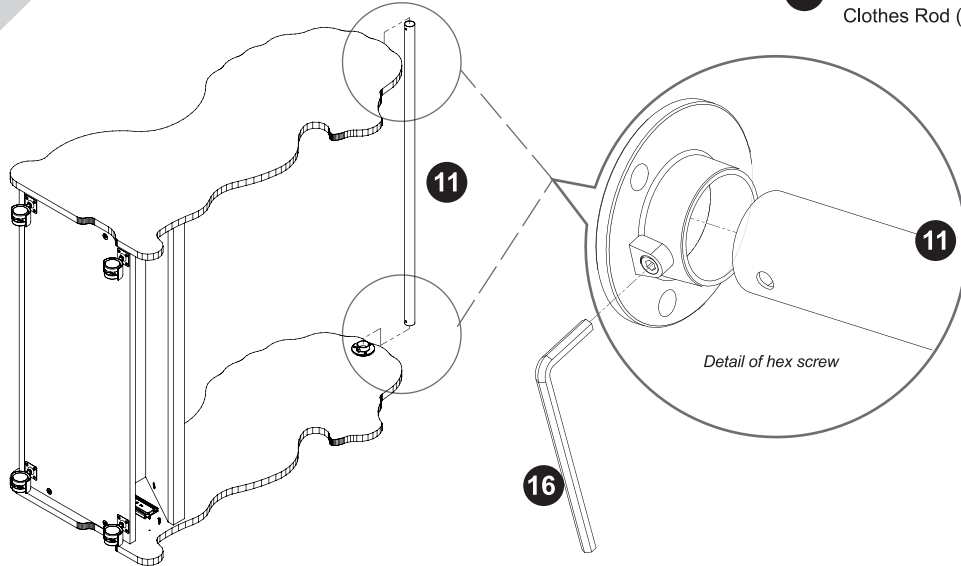


Note: Use **16** Small Hex to tighten Hex Screw (already attached to clothes rod hardware)

! Make sure to tighten Hex Screw until it goes through the rod

11 Drawer Assembly Overview

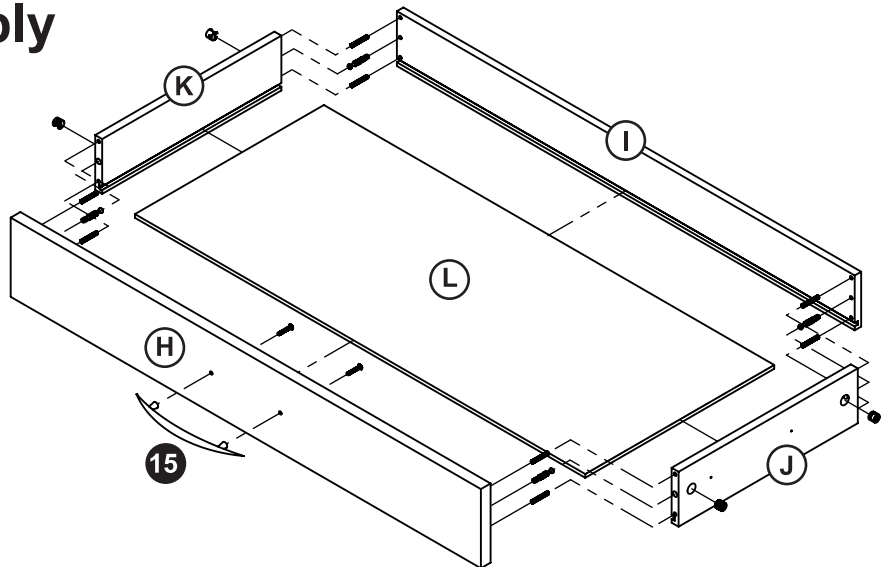

12 Assemble Hardware to Drawer Parts

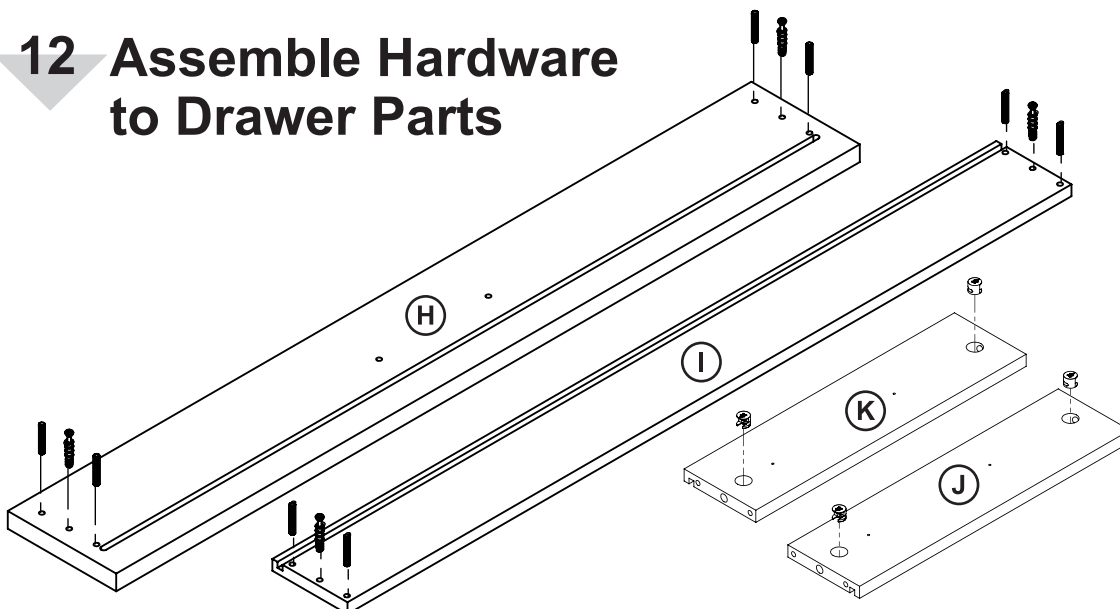


1 Connector Bolt 5mm (x4)


3 Dowel Ø 5mm (x8)

10 Connector Locks Ø12mm (x4)


13 Attach Drawer Sides

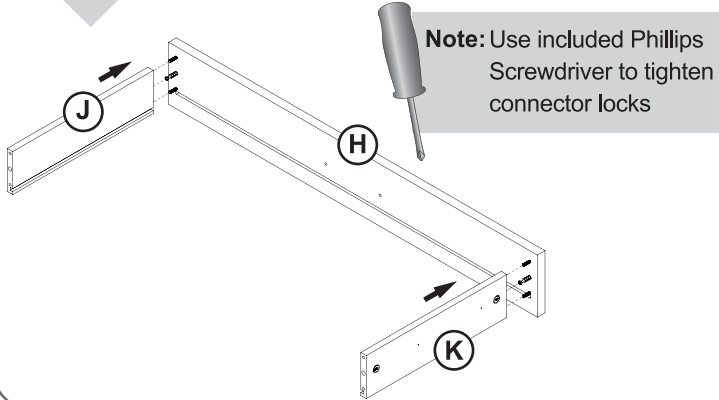


14 Insert Drawer Bottom

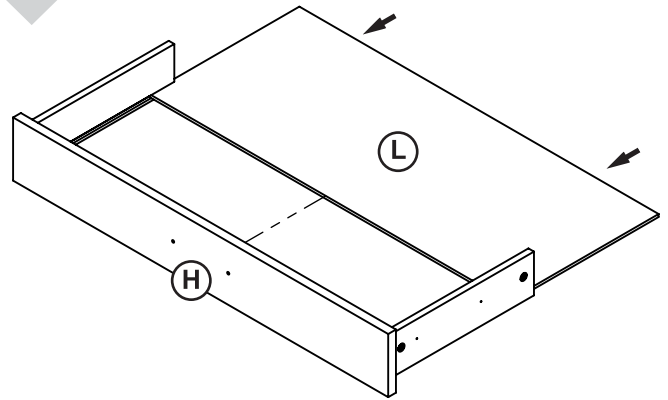

15 Assemble Drawer Back

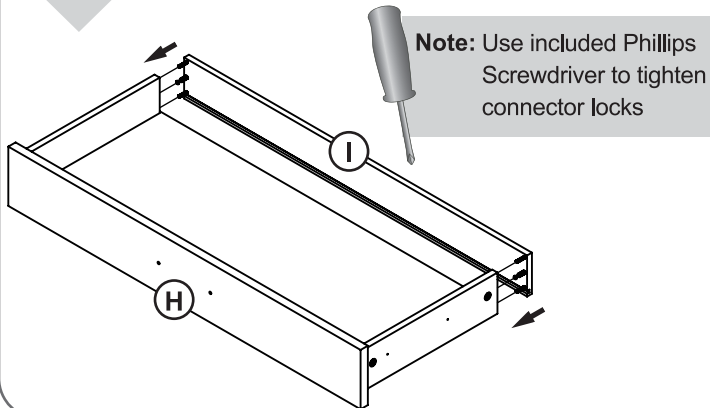


16 Attach Drawer Handle

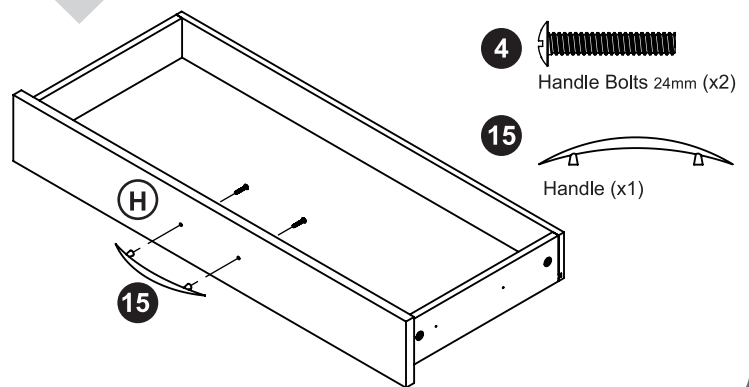

17 Extend Rails and Insert Drawer into Cabinet


Note: Keep drawer rails extended while inserting drawer into cabinet. Do not close drawer completely.

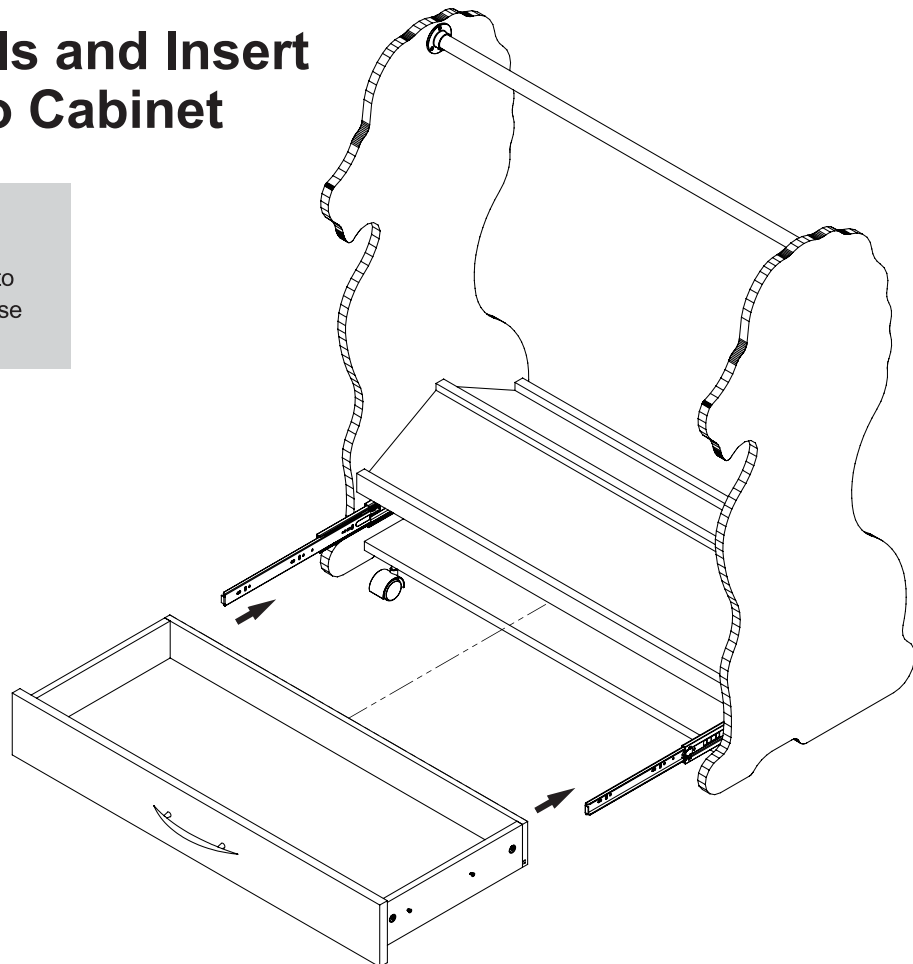


18 Screw Rail to Drawer

Note: Align screw holes of drawer rail to drawer panel, then fasten screw

8  Screws 14mm (x2)

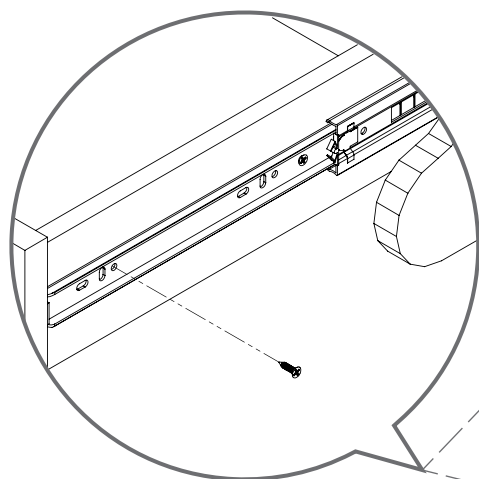


Detail of screw position 18.1

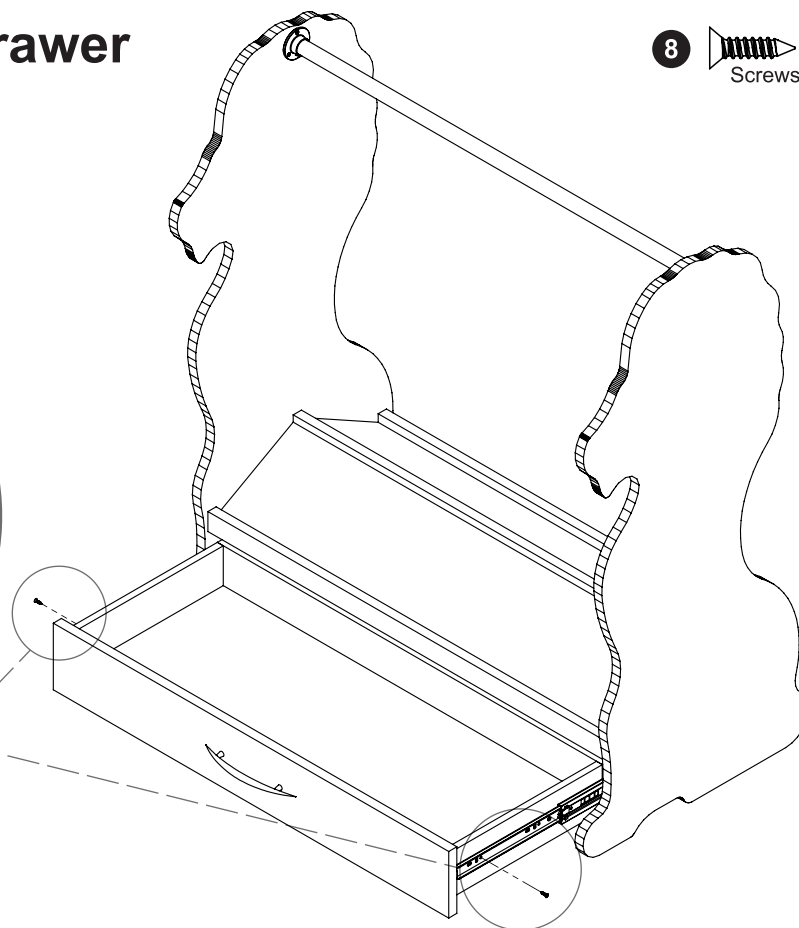

19 Screw Rail to Drawer

Note: Extend rail further out to reveal screw position 19.1

8  Screws 14mm (x2)

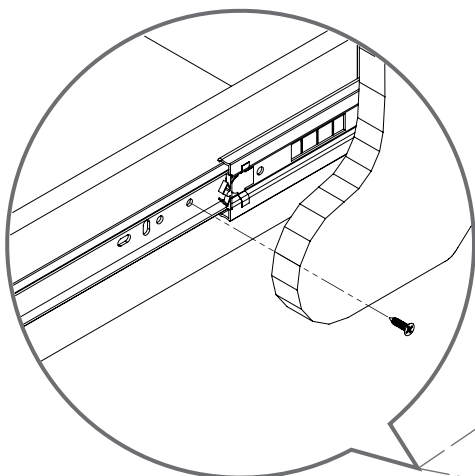

Detail of screw position 19.1

